

## Maintenance Stauffix FKA

### Article information

Item no.: 80117

GTIN:

Price group: 00

### Description

Maintenance of the automatic backwater valve Stauffix FKA, exposed installation / floor slab installation

#### Scope of services (all work is carried out according to the inspection card):

- Functional check
- Removing the locking cover and inspecting the cover seal
- Removing the flaps, inspecting the flap seal, cleaning the components
- Inspecting the electrical system components
- Greasing the moving parts
- Assembling the system
- Leak test
- Sealing the emergency closure (both flaps shut)
- System must be handed over in a safe operational state
- The recorded values are documented in a maintenance report

#### Requirements on site:

- Contact person must be on site
- Access to the system and control unit
- A hose water connection must be provided nearby

#### Note:

- Regular maintenance is a prerequisite for the warranty and insurance cover

#### Not included are costs for:

- Material expenses over 20 euros
- Any additional incidental expenses are charged based on the expenses incurred
- Difficult conditions, repair services, additional work
- Wasted journeys despite prior notice

Backwater valves must be serviced every six months by a specialist company in accordance with DIN 1986-3.

The price stated is for each maintenance operation.

From the commissioning to the execution of the service, a processing time of 10 working days should be expected.